PLBT73G

PYLE®

User's Manual

7-inch Bluetooth and GPS Navigation Headunit Receiver

with Built-in Mic for Hands-Free Call Answering, Touch Screen, CD/DVD Player, USB/SD Card Readers, AM/FM Radio, AUX Input

Pyleaudio.com

Thank you for selecting our products.Before use, please be sure to read it carefully for safe operation.Our company has the right to make final description of the Operating Instructions of this product.

Notice of use

Attention: Before installation, please carefully read all the instructions. Car audio professional vendors' guidance are recommended for the installation.

This model fits automobile 12V power supply system(ground wire should be connected). Please do not install it directly in truck or bus with 24V power supply, otherwise will cause damage to the machine.

Original disc is required. Please do not use non-standard or inferior disc, otherwise may cause machine malfunction or serious impact on its service life.

Replace of power fuse without professional instruction is prohibited. The improper use of fuse will cause machine damage or a fire.

Do not place the unit in moist and humid conditions to avoid electric shock, damage and fire caused by short circuit.

Do not touch the screen with hard goods.

Attention: To avoid short circuit, please stall the car and disconnect ACC and B+.

Control Panel& Layout		
	DIM	Adjusts brightness level of the LCD touchscreen display panel
	HOME	Reverts you to the LCD touchscreen display panel home interface screen
	NAV	GPS Navigation Software
	RADIO	AM/FM Radio
	AMS	Automatic Music Scan□Scans through broadcasting stations quickly setting presets
	P/P	Play/ Pause for CD/DVD Player Control
	DVD	Reverts you the inserted CD/DVD Disc
	PREVIOUS	Rewind/ Previous control for CD/DVD
	NEXT	Fast Forward/ next control for CD/DVD
	OPEN	Activates the motorizedtouchscreen display to open/ angle adjustment
	CLOSE	Activates the motorizedtouchscreen display to close/ angle adjustment
	AUX	Auxiliary 3.5mm input connector jack for connecting external devices
	USB	USB flash drive reader for connecting thumb drives containingmedia files
	REL	Release button for the receiver display panel face
	EJECT	Ejects CD/DVD

Home Screen□ InterfaceControl& Layout		
A	Settings	System Settings□the first setting in this menu asks you to select the 'navi path'. Make sure the path is always set to ***'...SDMMC\Primo\PRIMO.EXE'.*** This path directs the receiver's system to the correct location of the GPS Navigation Software. Freq. Area□is reserved for factory setup. Please disregard these settings. Backlight□adjusts the brightness of the LCD touchscreen display panel. Background□allows you to choose the display panel's screen saver. Sound□configurable EQ controls. Language□multi□language support. Set Time□Time zone and format settings Cat logo□is reserved for factory setup. Please disregard these settings. Info□Headunit receiver version information and touchscreen calibration. Black Set□Automatic screen turn□off settings Applications□is reserved for factory setup. Please disregard these settings. Key Lamp□Receiver face light colorcan be turned ON/OFF and color adjusted.

B	Navi	Navigation GPS Software
C	Calc	Calculator
D	BT	Bluetooth wireless calling ability□connect your compatible smartphone and import your phonebook
E	AUX	Aux inputconnected audio streaming
F	Media	DVD□SD□USB
G	SD Icon	Indicates whethera micro SD card is inserted
H	USB icon	Indicates whethera USB flash drive is inserted
I	BT icon	Indicates whether there is an established Bluetooth connection
J	CD icon	Shortcut to the CD/DVD inserted disc
K	Radio	AM/FM radio
L	Radio icon	Shortcut to the AM/FM radio
M	GPS icon	Shortcut to the GPS Navigation Software
N	Game	Playable games
O	Gear icon	Shortcut to the system settings menu
	Volume	The receiver panel rotary knob controls volume adjustment

Disc/ Media Playback:

Attention, please use standard and genius discs and keep the discs clean prior toinsertion. Proper use can assure normal service life of this product. Insert the disc into the disc inlet slightly, the discwill be suctioned into the device and played automatically. When there isa disc in the device, press DVD icon on the touchscreen or press the DVD button on the receiver face panel, to play. If the disc is stuck or cannot be removed press and hold the eject button.

To playback digital media files likeimages, pictures and movies froma compatible CD/DVD, press the 'Media' icon on the touchscreen display thenpress 'DVD'. From here, you can also access digital audio files from an inserted micro SD card or USB flash thumb drive.

Audio and Video knowledge

Disc types	Content	Disc size
DVD	Sound & Picture	12cm
VCD	Sound & Picture	12cm
CD	Sound	12cm
MP3	Sound	12cm
MPEG -4	Sound & Picture	12cm
USB	Sound & Picture	12cm
Notice: This product supports VCD discs of 1.0/1.1/2.0/3.0 version		

Radio

This product is built-in high quality AM/FM/RDS radio receiver, which supports AM/FM auto search function, frequency display, etc.

1. ---Short press this button to upward adjust the station gradually; Long press this button to upward search the station semi-automatically.
2. --- Short press this button to downward adjust the station gradually; Long press this buttonto downward search the station semi-automatically.
3. **BAND** --- Press this button to switch radio bands.
4. **ST** --- Single track. In FM band, press this button to switch between ST and MONO. The default setting is ST. AM band doesn't have this function.
5. **LOC** --- In FM band, press this button to switch between LOC and DX. The default setting is DX.AM band doesn't have this function
6. --- Short press this button to scan the stations in prestored district; Long press this button to automatically search station and save the searched stations into the prestored district.
7. Both sides are for prestored station region. Short press any station number of this region, it will play the station that chose; Long press any station number, the current station frequence will be restored.

Bluetooth(optional)

This device has bluetooth and hand free function. If your mobile has bluetooth function, it can set up point-to-point connection with this device. Phone call and music play functions etc.

1. Search Bluetooth device
2. Pairing. Before pairing, your mobile will be prompted for a password (default password is 0000).
3. Disconnect
4. Dialing
5. Phone book
6. Call records
7. Settings
8. Bluetooth music
9. Delete phone book records
10. Download phone book
11. Voice switch between phone and car multimedia player
12. Search for phone number

TV function(optional)

The system is built-in TV function. It supports TV signal inputs of all colour and sound systems

IPod(optional)

This system supports IPod audio..

Remote control

Key name Function

【1】MODE .....Mode conversion

【2】EJECT .....Key for ejecting/suctioning disc

【3】OPEN .....Key for opening and closing screen

【4】⏻ .....Power switch on/off key

【5】1.2.3.4.5.6.7.8.9.0 .....Numeric key

【6】VOL+ VOL -.....Increase/decrease volume

【7】MUTE .....Mute key

【8】UP DN .....Screen angle adjustment

【9】SETUP .....Enter system setting menu

【10】INFO .....DVD information, GPS shortcut key

【11】 .....Repeat single/folder

【12】MENU .....System main interface

【13】RAN .....Random play switch

【14】SCAN .....Scan play

【15】▼▶◀▲OK .....left/right/up/down to select and confirm. When playing disc,left/right is to control last/next

【16】SRCH .....Searching play

【17】ZOOM .....Under DVD mode, key for image zoom

【18】SLOW .....Slow down from 1/2 to 1/7

【19】▶/❚❚ .....Play/pause

【20】 ■ .....Stop

【21】ANGLE .....Under DVD mode, key for switching angles (supported by dixc)

【22】PIC .....Display screen brightness, contrast, color adjustment key, to be used in conjunction with direction key

【23】SUB-T .....Subtitles selection

【24】AUDIO .....Language selection

Troubleshooting

Phenomenon	Reasons	Solutions
Not operating	Fuse of machine power supply and auto vehicle battery is burnt; Voltage of power supply is overloaded; Automatic protection system avoids fault due to illegal operation	Change for fuse of the correct types; Adjust voltage; Reset the system by pressing the Reset key
No or low sound	Disconncetion; Volume setting is low volume; Loudspeaker fault Big deviation of volume balance setting; Earthing in loudspeaker conection	Check the connection; increase volume Adjust the volume balance setting to middle place; Keep insulation of loudspeaker connection
Remote control doesn't work	Battery is out of power; Battery is not placed correctly	Change new battery; Reinstall battery;
Inferior quality of sound; Distortion of sound	Inferior disc is prohibited; Loudspeaker does not match impedance of the machine; Speaker fault	Use genuine discs; Change a matched loudspeaker; Check the connection of loudspeaker.
Machine reset by itself when it is shut down	Connection of ACC and B+ is not correct.	Check and reconnect ACC and B+
No image	Connection of brake wire is not correct; Not braking state.	Check brake wire and connect them corerectly; Keep braking state after the car is placed safely.
Unstable output of image	DVD does not correspond with the present system video setting; Video signal line is not connected correctly.	Adjust systerm video setting; Check and replace video signal line.
Image stretching or compressing	Incorrect ratio settings of icons	Use correct ratio settings of icons
Weak signal	Auto antenna does not reach out completely LOC function is under working state.	Connect auto antenna line correctly Close LCC function

Wiring Diagram - Inputs/Outputs

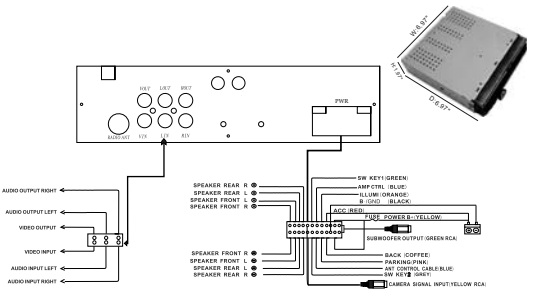

Follow Us On:

Visit Pyleaudio.com

1600 63rd Street. Brooklyn. NY 11204